



# PRODUCT SHEET

## VXD Preaction Single Interlock System, Electric Release



The Viking Corporation (Far East) Pte. Ltd. | 69 Tuas View Square Westlink Techpark, Singapore 637621

**ASIA PACIFIC ONLY**

### 1. INTRODUCTION

Viking supervised VXD Single-Interlocked Preaction Systems utilize a Viking Model VXD Deluge Valve and a pneumatically pressurized automatic sprinkler system. This feature helps prevent undetected leaks. Single-Interlocked Preaction Systems are commonly used where the sprinkler system piping and/or sprinkler may be subject to damage. If the system piping or a sprinkler is damaged, supervisory pressure is reduced and a "low air" supervisory is activated. The electrically controlled preaction systems include an electric solenoid valve controlled by an approved release control panel (sold separately) with compatible detection system (sold separately). In fire conditions, when the detection system operates, the system release control panel energizes the solenoid valve open, causing the deluge valve to open. The sprinkler system fills with water. If any sprinklers have opened, water will flow from the system. If sprinklers have not opened, water will be in the sprinkler system piping when the sprinkler operates. A sprinkler must open before water flows from the system.



### 2. LISTINGS AND APPROVALS



**cULus Listed** - Categories VLFT and VLFT7



**FM Approved** - Viking Electric/Pneumatic Double-Interlocked Preaction Systems are FM Approved as refrigerated area systems.



**WARNING:** Cancer and Reproductive Harm-  
[www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

### 3. ORDERING INFORMATION

The Model VXD Single Interlock Preaction System with Electric Release is available in Pre-Trimmed Riser (PTR) assembly, Pre-trimmed (PT), or loose configurations with optional accessories to complete the system.

#### Loose Trim Packages

Loose trim packages come loose in a box and assembly is required. The packages do NOT include the Model VXD valve or a riser check valve, which must be ordered separately. The Model VXD deluge valve can be ordered with flange/flange or groove/groove connections (refer to the Model VXD deluge valve technical data). The loose trim packages can be ordered with galvanized or brass trim, refer to Table 1a below.

These loose trim packages include the following components:

- all required trim components
- electric release solenoid
- pneumatic actuator
- pressure gauges for air and water
- loose drain cup

Refer to the "System Components" for more information.



# PRODUCT SHEET

## VXD Preaction Single Interlock, System, Electric Release



The Viking Corporation (Far East) Pte. Ltd. | 69 Tuas View Square Westlink Techpark, Singapore 637621

ASIA PACIFIC ONLY

**Table 1a: Model VXD Single Interlock Preaction System with Electric Release (Vertical)**

Nominal Size	Ordering Information			Notes
	VXD Deluge Valve (Grooved)	Preaction Trim Double Interlock	Check Valve Grooved	
2"	23311	23583-1G	RH84XF4D60	2 Pressure Switches (PS40-1: alarm & air), coupling (VXD to check valve connection) and Water Motor Alarm must be ordered separately.
2½" (73.0mm)	24305	23604-1G	RH84XF4D73	
2½" (76.0mm)	23312	23604-1G	RH84XF4D76	
3"	23313	23625-1G	RH84XF4D89	
4"	23316	23646-1G	RH84XF4D114	
6" (165.1mm)	24306	23668-1G	RH84XF4D165	
6" (168.3mm)	23319	23668-1G	RH84XF4D168	
8"	23322	23689-1G	RH84XF4D219	

### Valve and Trim Packages

The package includes all the components you need to assemble a complete valve assembly including the Model VXD valve and loose trim and ancillaries. Refer to Table 1b for part numbers

These packages include the following components:

- VXD Deluge Valve (Grooved)
- all required trim components
- electric release solenoid
- pneumatic actuator
- pressure switches
- pressure gauges for air and water
- loose drain cup


Refer to the "System Components" for more information.

**Table 1b: Model VXD Single Interlock Preaction System with Electric Release (Vertical)**

Nominal Size	Part Number	Notes
2"	23311SIE	Water Motor Alarm must be ordered separately.
2½" (73.0mm)	24305SIE	
2½" (76.0mm)	23312SIE	
3"	23313SIE	
4"	23316SIE	
6" (165.1mm)	24306SIE	
6" (168.3mm)	23319SIE	
8"	23322SIE	



#### 4. SYSTEM COMPONENTS

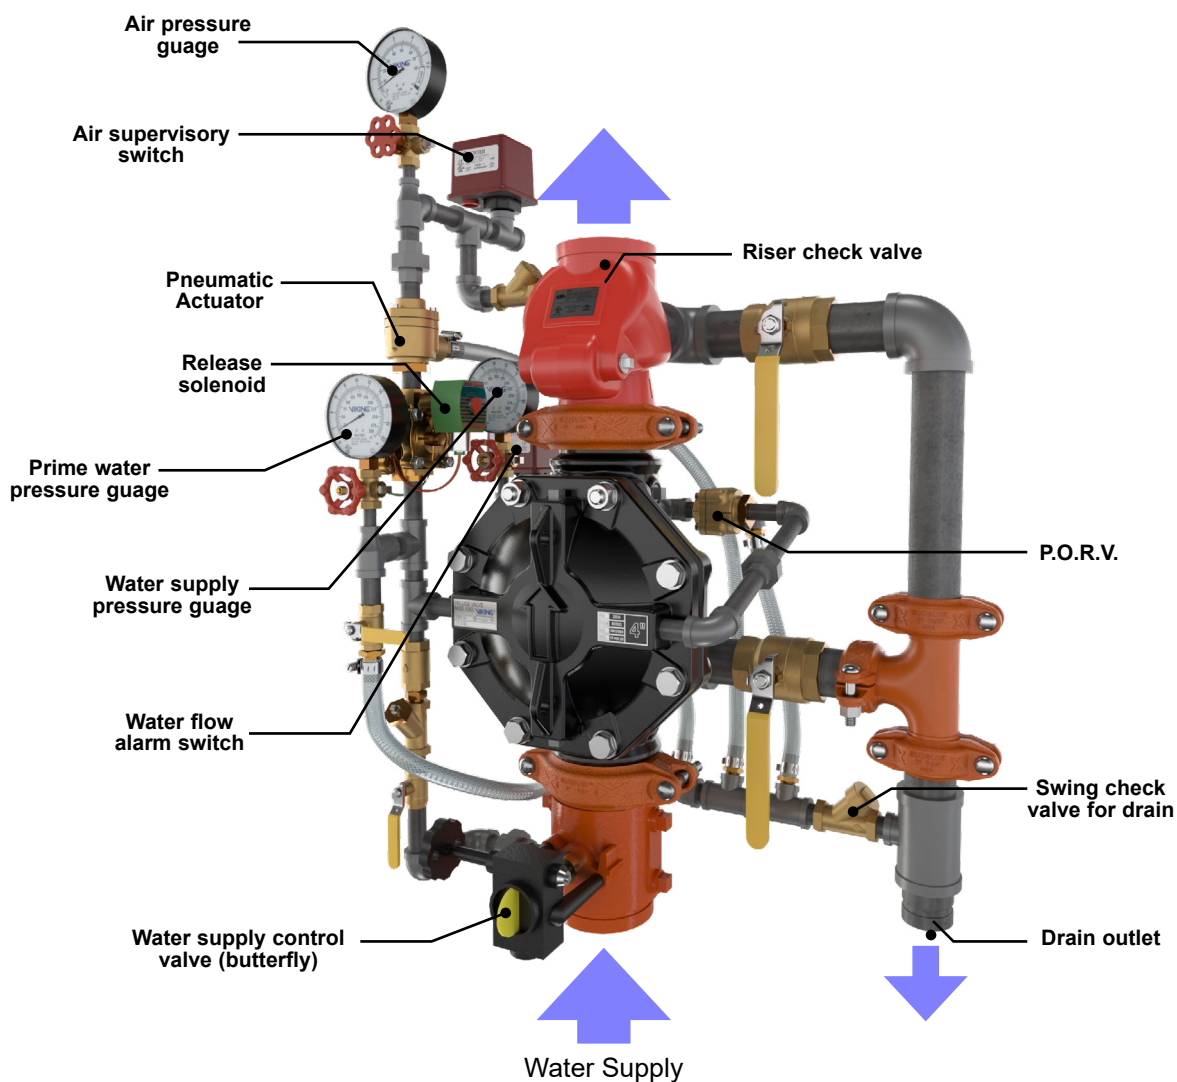

**Figure 3: System Components**



## 5. SYSTEM OPERATION

### 5.1 In the SET condition:

System water supply pressure enters the priming chamber of the deluge valve through the priming line which includes a normally open priming valve, strainer, restricted orifice (not shown), and check valve. In the SET condition, water supply pressure is trapped in the priming chamber by check valve, pneumatic actuator, normally closed solenoid valve, and emergency release. The water supply pressure trapped in the priming chamber holds the deluge valve diaphragm closed, keeping the outlet chamber and system piping dry.

### 5.2 In fire conditions:

In a fire condition, when the detection system operates, system release control panel energizes solenoid valve open. Alarms activate, but the deluge valve will NOT open until a sprinkler opens relieving air/nitrogen pressure from the sprinkler system. When a sprinkler opens, supervisory pressure in the sprinkler piping is reduced causing the pneumatic actuator to open. After BOTH the electric detection system activates AND air/nitrogen in the sprinkler system has been lost, pressure is released from the priming chamber faster than it is supplied through restricted orifice. The deluge valve diaphragm opens to allow water to flow into the system piping and alarm devices, causing water motor alarm and water flow alarms connected to alarm pressure switch to activate.

When the deluge valve operates, water is drained from the PORV inlet. When the 10:1 differential is overcome, the pushrod opens, allowing the prime water to drain. If a release resets, priming water will continue to escape through the PORV, allowing the deluge valve to continue to operate until the system is reset. The Deluge Valve can only be reset after the system is taken out of service, and the outlet chamber of the deluge valve and associated trim piping are de-pressurized and drained.

### 5.3 In trouble conditions:

If a sprinkler opens prior to operation of the detection system, or any time supervisory pressure in the sprinkler piping is lost, the air supervisory switch will signal a low air pressure condition, but the deluge valve will NOT open. If the electric detection system operates due to mechanical damage or malfunction, the deluge valve will NOT open.

### 5.4 Manual operation:

Anytime the emergency release is pulled, pressure is released from the priming chamber and the deluge valve will open. Water will flow into the system piping and alarm devices. Water will flow from any open sprinklers and/or spray nozzles on the system.

## 6. INSTALLATION

Refer to current Viking Technical Data describing individual components of the Viking VXD Preaction System. Also, refer to applicable installation standards, codes, and Authorities Having Jurisdiction.

### 6.1 Recommended Air Pressure Settings

**NOTE:** Installation Standards may allow air/nitrogen pressures lower than those recommended below. When using air/nitrogen pressures lower than the recommended setting noted below, verify that the air regulation equipment and air supervisory switches used are compatible with the air/nitrogen pressure setting used.

TABLE 2: Recommended Air Pressure Settings		
Device	System Water Pressure	
	Up to 175 PSI (12 bar)	Over 175 PSI (12 bar) to 250 PSI (17 bar)
	Set to Maintain:	
Air Compressor On/Off Switch	ON: 30 PSI (2 bar) OFF: 40 PSI (2.8 bar)	ON: 50 PSI (3.4 bar) OFF: 60 PSI (4.1 bar)
Air Maintenance Device (release system)	30 PSI (2 bar)	50 PSI (3.4 bar)
Air Pressure Supervisory Switch (release system)	25 PSI (1.7 bar)	45 PSI (3.1 bar)
Alarm pressure switch	4 to 8 PSI (0.3 to 0.6 bar)	4 to 8 PSI (0.3 to 0.6 bar)



## 6.2 Air Supply Design

The air supply compressor should be sized to establish total required air pressure in 30 minutes. The air supply must be regulated, restricted, and maintained automatically. The air maintenance device is used to regulate and restrict the flow of air/nitrogen into the sprinkler system piping.

The air supply must be regulated to maintain the pressure desired in the release system. Pressure settings other than those recommended in section 6.1 above may affect operation of the system. The air/nitrogen supply must be restricted to ensure that the automatic air supply cannot replace air as fast as it escapes when a releasing device operates.

Riser Mounted Air Compressors:

A riser mounted air compressor may be suitable for small electrically operated single-interlocked preaction systems; however, placement of a dehydrator and/or an air maintenance device in the outlet piping of a riser mounted air compressor may affect operation of the compressor.

## 7. PLACING THE SYSTEM IN SERVICE

Placing the Valve in Service:

1. Verify the following:
  - The system main water supply control valve (not shown) is closed.
  - The system has been properly drained and main drain (J) is open.
  - The emergency release (F) is closed.
2. Close the system main drain (J).
3. Restore air/nitrogen to the sprinkler piping. Verify that the 1/2" valve in the air maintenance device by-pass trim is closed and that both the 1/4" valves are open.
4. Establish a normal condition on the release control panel.
5. Open the priming valve (A).
6. Open flow test valve (G).
7. Slowly and partially open main water supply control valve (not shown).

**NOTE: Opening the main water supply valve too quickly can create excessive pressure causing the valve to trip.**

8. When full flow develops from the flow test valve (G), close the valve. Verify that there is no flow from the open orifice.
9. Fully open and secure the main water supply control valve.
10. Verify that all valves are in their normal operating position.
11. Verify that no water is discharging into the drain cup.
12. Check for, and repair all leaks.
13. On new installations, those systems that have been placed out of service, or where new equipment has been installed, trip test the system to verify that all equipment functions properly. Refer to Annual Trip Tests, section 9.2.C.
14. After completing a trip test, perform semi-annual maintenance. Refer to section 9.3.B.

### **⚠ CAUTION**

**Performing a trip test results in operation of the Deluge Valve. Water will flow into the sprinkler piping. Take necessary precautions to prevent damage.**



# PRODUCT SHEET

## VXD Preaction Double Interlock System, Electric/Pneu-Lectric Release



The Viking Corporation (Far East) Pte. Ltd. | 69 Tuas View Square Westlink Techpark, Singapore 637621

ASIA PACIFIC ONLY

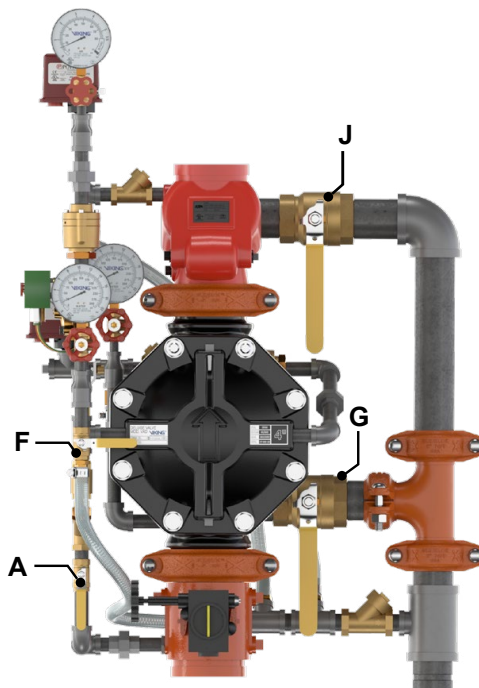


Figure 6: Placing the System in Service

## 8. EMERGENCY INSTRUCTIONS

### ⚠ WARNING

**WARNING:** Placing a control valve or detection system out of service may eliminate the fire protection capabilities of the system. Prior to proceeding, notify all Authorities Having Jurisdiction (AHJ). Consideration should be given to employment of a fire patrol in the affected areas.

Refer to the appropriate technical data page and NFPA standards for complete care, handling, installation, and maintenance instructions. For additional product and system information, Viking data pages and installation instructions are available on the Viking Web site at [www.vikinggroupinc.com](http://www.vikinggroupinc.com).

### To take system out of service (Refer to Figure 6):

After a fire, verify that the fire is OUT and that placing the system out of service has been authorized by the appropriate Authority Having Jurisdiction.

1. Close the water supply control valve (not shown).  
**NOTE: Sprinkler systems that have been subjected to a fire must be returned to service as soon as possible. The entire system must be inspected for damage, and repaired or replaced as necessary.**
2. Open the system main drain.
3. Shut off the air supply (optional).
4. Close the priming valve (A).
5. Replace any release devices, sprinklers and/or spray nozzles that have been damaged or have been exposed to fire conditions.
6. Perform all maintenance procedures recommended in Technical Data describing individual components of the system that have operated.
7. Return the system to service as soon as possible. Refer to section 7: Placing the System In Service.



## 9. INSPECTIONS, TESTS, AND MAINTENANCE

### ⚠ WARNING

Any system maintenance that involves placing a control valve or detection system out of service may eliminate the fire protection capabilities of that system. Prior to proceeding, notify all Authorities Having Jurisdiction. Consideration should be given to employment of a fire patrol in the affected areas.

### NOTICE

The owner is responsible for maintaining the fire protection system and devices in proper operating condition.

It is imperative that the system be inspected and tested on a regular basis in accordance with NFPA 25. Refer to current Viking Technical Data describing individual components.

The frequency of the inspections may vary due to contaminated water supplies, corrosive water supplies, corrosive atmospheres, as well as the condition of the air supply to the system. For minimum maintenance and inspection requirements, refer to NFPA 25. In addition, the Authority Having Jurisdiction may have additional maintenance, testing, and inspection requirements that must be followed.

### 9.1 Inspection

**Weekly - Viking recommends a weekly visual inspection; check the following items.**

- Verify that the main water supply control valve is open and that all other valves are in their normal operating position and appropriately secured. (refer to Figure 6)
- Check for signs of mechanical damage, leakage, and/or corrosive activity. If detected, perform maintenance as required. If necessary, replace the device.
- Verify that the valve and trim are adequately heated and protected from freezing and physical damage.

**NOTE: For normal operating position, refer to Figure 3.**

### 9.2 Periodic System Tests

#### A. Quarterly Water Flow Alarm Test

1. Notify the Authority Having Jurisdiction and those in the area affected by the test.
2. To test the local electric alarm (if provided) and/or mechanical water motor alarm (if provided), OPEN the alarm test valve in the Deluge Valve trim.
  - a. Electric alarm pressure switches (if provided) should activate.
  - b. Electric local alarms should be audible.
  - c. The local water motor gong should be audible.
  - d. If equipped with remote station alarm signaling devices, verify that alarm signals were received.
3. When testing is complete, CLOSE the Alarm Test Valve.
4. Verify the following:
  - a. All local alarms stop sounding and alarm panels (if provided) reset.
  - b. All remote station alarms reset.
  - c. Supply piping to water motor alarm properly drains.
5. Verify that the Alarm Test Valve is CLOSED.
6. Verify that the outlet chamber is free of water. No water should flow from the alarm drain line.
7. Notify the Authority Having Jurisdiction and those in the affected area that testing is complete.




**B. Quarterly Main Drain Test**

1. Notify the Authority Having Jurisdiction and those in the area affected by the test.
2. Record pressure reading from the water supply pressure gauge.
3. Verify that the outlet chamber of the Deluge Valve is free of water. No water should flow from the alarm drain line.
4. Fully OPEN the Flow Test Valve.
5. When a full flow is developed from the Flow Test Valve, record the residual pressure from the water supply pressure gauge.
6. When the test is complete, SLOWLY CLOSE the Flow Test Valve.
7. Compare test results with previous flow information. If deterioration of the water supply is detected, take appropriate steps to restore adequate water supply.
8. Verify:
  - a. Normal water supply pressure has been restored to the inlet chamber, the priming chamber, and the release system. The pressure on the priming chamber water pressure gauge should equal the system water supply pressure.
  - b. All alarm devices and valves are secured in normal operating position (refer to Figure 3).
9. Notify the Authority Having Jurisdiction that the test is complete. Record and/or provide notification of test results as required by the Authority Having Jurisdiction.

**C. Annual Trip Test**
**⚠ CAUTION**

**Performing this test results in operation of the Deluge Valve. Water will flow into the sprinkler piping and from any open sprinklers and/or nozzles. Take necessary precautions to prevent damage.**

1. Notify the Authority Having Jurisdiction and those in the area affected by the test.
2. Fully open the Flow Test Valve to flush away any accumulation of foreign material.
3. Close the Flow Test Valve.
4. To trip the deluge valve:
  - a. Operate a detector according to the manufacturer's instructions.
  - b. Open the sprinkler system inspector's test valve.
5. When test is complete:
  - a. Close the Main Water Supply Control Valve.
  - b. Close the Priming Valve.
  - c. Open all system main drains. Allow the system to drain completely.
6. Perform semi-annual maintenance. Refer to section 9.3.B: Semi-Annual Maintenance.
7. Place the system in service. Refer to section: "7. Placing the System in Service".
8. Notify the Authority Having Jurisdiction that the test is complete. Record and/or provide notification of test results as required by the Authority Having Jurisdiction.





# PRODUCT SHEET

## VXD Preaction Double Interlock System, Electric/Pneumatic Release



The Viking Corporation (Far East) Pte. Ltd. | 69 Tuas View Square Westlink Techpark, Singapore 637621

**ASIA PACIFIC ONLY**

### D. Quarterly "Low Air" Pressure Alarm Test

#### **IMPORTANT**

**Do not operate the electric detection system during this test.**

1. Notify the Authority Having Jurisdiction and those in the area affected by the test.
2. Close the main water supply valve.  
**NOTE: Closing the main water supply valve prevents operation of the deluge valve during the test.**
3. Fully OPEN the test connection to simulate operation of a sprinkler.
4. Verify that the low air alarms operate within an acceptable time period and continue without interruption.
5. Close the test connection.
6. Establish recommended air/nitrogen pressure to be maintained. Refer to section "6.1 Recommended Air Pressure Settings".
7. Reset the system release control panel to stop the alarms.
8. Return the system to service. Refer to section: "7. Placing the System in Service".

### 9.3 Maintenance

#### **A. After Each Operation:**

1. Sprinkler systems that have been subjected to a fire must be returned to service as soon as possible. The entire system must be inspected for damage, and repaired or replaced as necessary.
2. Deluge Valves and trim that have been subjected to brackish water, salt water, foam/water solution, or any other corrosive water supply, should be flushed with good quality fresh water before being returned to service.
3. Perform semi-annual maintenance after every operation.

#### **B. Semi-Annually:**


1. Remove the system from service.
2. Close the Main Water Supply Control Valve and Priming Valve.
3. Relieve pressure in the priming chamber by opening the emergency release Valve.
4. Inspect all trim for signs of corrosion and/or blockage. Clean and/or replace as required.
5. Clean and/or replace all strainer screens.
6. Refer to section: "7. Placing the System in Service".

#### **C. Every Fifth Year:**

1. Internal inspection of Deluge Valves is recommended every five years unless inspections and tests indicate more frequent internal inspections are required. Refer to the Model VXD Valve Technical Data Page.
2. Internal inspection of strainers, and restricted orifices is recommended every five years unless inspections and tests indicate more frequent internal inspections are required.
3. Record and provide notification of inspection results as required by the Authority Having Jurisdiction.



## 10. DIMENSIONS

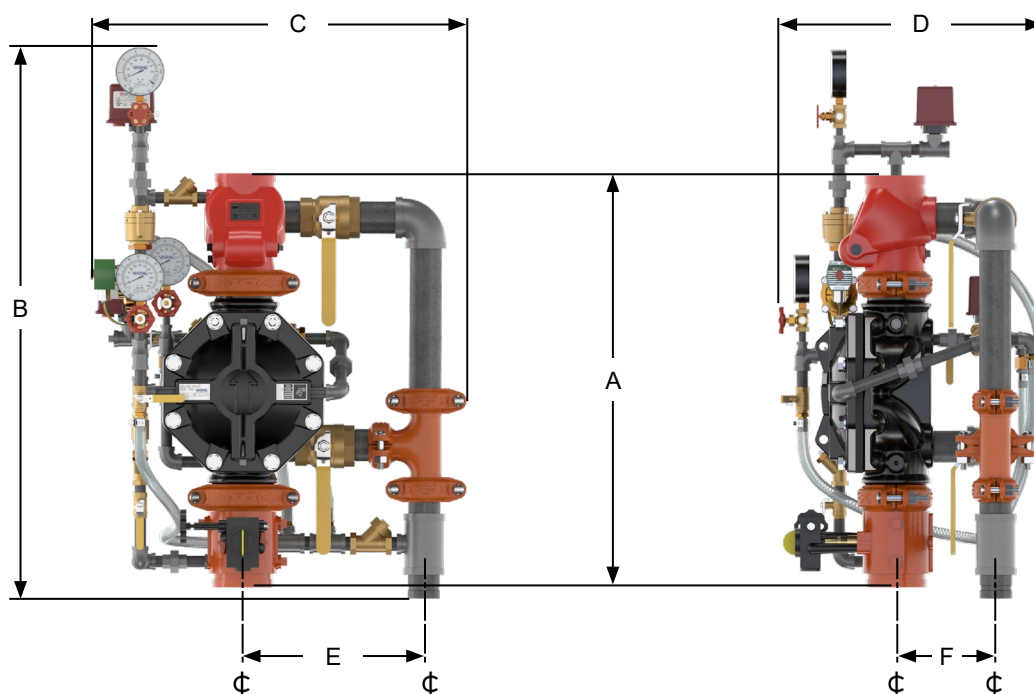

**Figure 4: Dimensions**

*Not to scale. All dimensions are approximate.*

**TABLE 4: DIMENSIONS (inches) FOR DOUBLE INTERLOCK PREACTION SYSTEMS**

System Type	Nominal Size	A (Takeout)	B	C	D	E	F
Double Interlock with Electric/ Pneu-Lectric Release	1½"	19⅜"	27⅜"	22⅜"	17"	9⅞"	2¾"
	2"	21¼"	26⅞"	21⅝"	16⅞"	10¼"	3¼"
	2½"	25⅜"	28⅝"	24⅝"	19¼"	10⅞"	5¾"
	3"	26⅞"	30¼"	23⅜"	20½"	10⅞"	6⅞"
	4"	30⅜"	34⅝"	28⅝"	20⅞"	13⅞"	7½"
	6"	38"	41¼"	29¼"	21⅞"	12⅝"	7½"
	8"	45"	48"	22¼"	22½"	14⅞"	8⅝"